 


The Bose® 601® Series IV Direct/Reflecting® Speaker System

Owner's Guide

BOSE

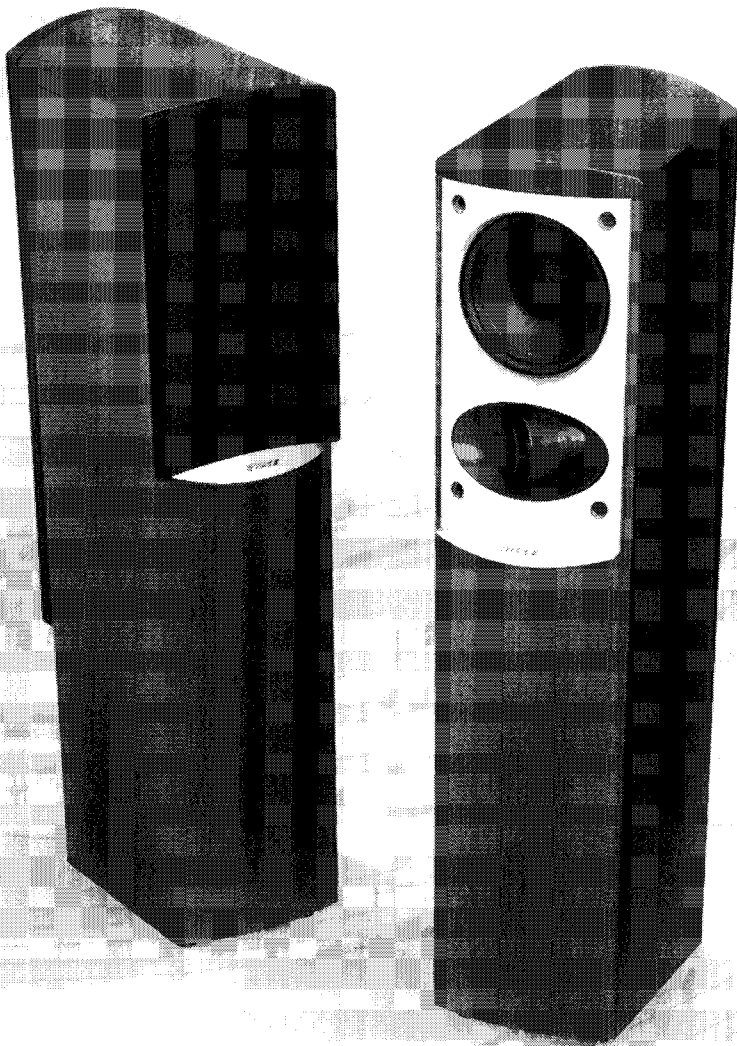



Declaration of Conformity

We, the offerer:

Bose® Corporation, The Mountain,
Framingham, MA 01701-9168 USA

Acknowledge our sole responsibility, that the product:

Kind of equipment: Loudspeaker

Type designation: 601® Series IV Direct/Reflecting® speaker

In accordance with EMC Directive 89/336/EEC and
Article 10 (1) of the Directive,
is in compliance with the following norm(s) or document(s):

**Technical regulations:
EN50081-1, EN50082-1**

Accredited by Bose Corporation

1 May 2001

A handwritten signature in black ink, enclosed within an oval-shaped stamp.

Bose Products B.V.
Nijverheidstraat 8, 1135 GE Edam
The Netherlands

Nic Merks
Vice President, Bose Europe
Manufacturer's authorized EU
representative

Setting Up	4
Introduction	4
Unpacking the speakers	4
Attaching the speaker grilles	4
Placing the speakers	5
Choosing the speaker cord	5
Running the speaker cord through a wall or under a floor	5
Preparing the speaker cord	6
Making the connections	6
Checking the connections	7
For use in home theater	7
For rear or surround speakers	7
Setting your surround sound receiver or amplifier	7
Reference Information	8
Troubleshooting	8
Technical information	9
Customer service	9
Cleaning	9

Warranty

Bose® 601® Direct/Reflecting® speakers are covered by a limited five-year transferable warranty. Details of the coverage are provided on the warranty card that came with your speakers. Please fill out the information section on your card, detach it, and mail it to Bose.

For your records

The serial number is located on the label on the back of each speaker.

Serial numbers: _____ and _____

Dealer name: _____

Dealer phone: _____ Purchase date: _____


We suggest you keep your sales slip and warranty card together with this owner's guide.

Introduction

Your 601® Direct/Reflecting® speakers re-create a natural balance of reflected and direct sound energy for a lifelike, spacious performance. As with all Bose® products, their design is meant to bring you high-quality concert-like sound.

Figure 1

 A natural balance of reflected and direct sound energy.

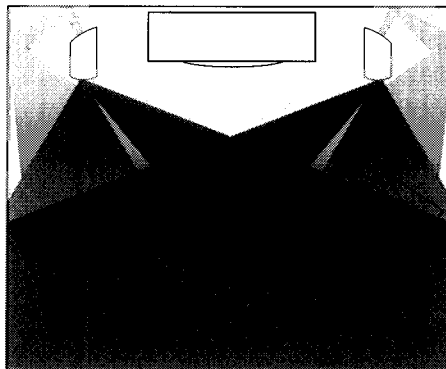

Unpacking the speakers

Carefully unpack the contents of the shipping carton.

- Individually remove each speaker.
- Retain the packaging material for possible future use.
- If either speaker appears damaged, do not use it. Repack both speakers in the original carton and notify your authorized Bose dealer immediately.


WARNING: To avoid danger of suffocation, keep the plastic bags that wrap these speakers out of the reach of children.

WARNING: Each speaker weighs 30 lb (13.6 kg). Use good lifting practice to avoid injury.

Figure 2

Package contents:

 - 1 left speaker
- 1 right speaker
- Owner's guide
- 2 front speaker grilles
- 2 rear speaker grilles

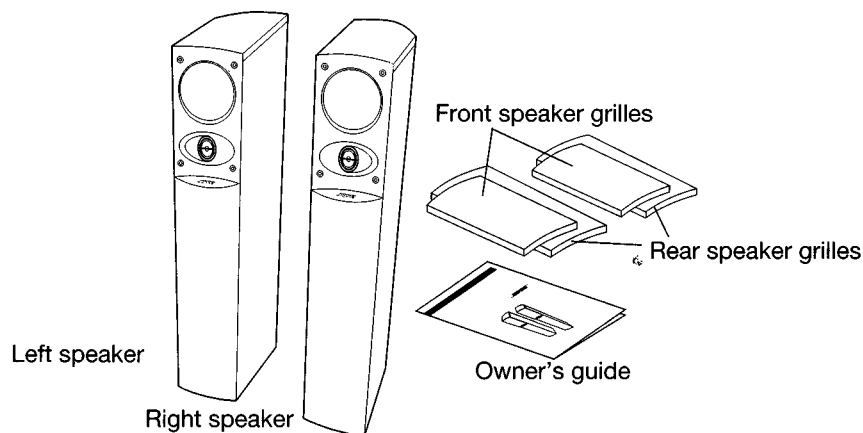

Attaching the speaker grilles

Each speaker has both a front and a rear protective grille. The rear grille is the larger of the two. To attach these grilles to your speakers, line up the top curve of the grille so that it matches the curve of the speaker. Align the pins on the back of the grille to the mounting holes on the speaker cabinet and gently push the grille straight on.

CAUTION: Do not place objects into any opening on the speaker cabinets.

Placing the speakers


The product label on the back of each speaker indicates LEFT or RIGHT. For best acoustic performance, place the left speaker on the left side as you face your speakers and place the right speaker on the right side.

Keep the speakers 6 - 15 feet (1.8 - 6 m) apart and at least 10 inches (25 cm) from side walls (see Figure 3).

It is important not to block the acoustic components at the rear of each speaker. To avoid this, place each speaker at least 8 inches (20 cm) from the wall behind it.

Figure 3

 Ideal speaker placement

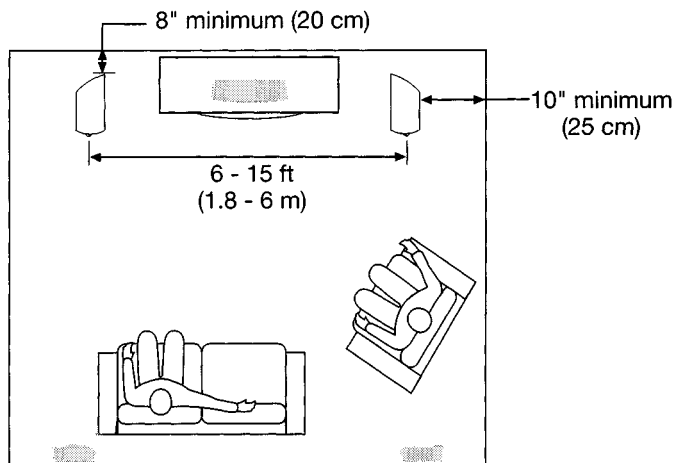


🎵 **Note:** Bose® 601® speakers are not intended to hang from walls, or to stand on shelves or tables. They are designed as floor-standing speakers only.

⚠️ **WARNING:** To prevent personal injury, do not place your speakers in high-traffic areas where they can be accidentally knocked over.

🎵 **Note:** To prevent interference with your TV picture quality, place each speaker at least 2 feet (.6 m) from your TV screen.

Figure 4

 Place each speaker at least 2 feet (.6 m) from your TV screen.

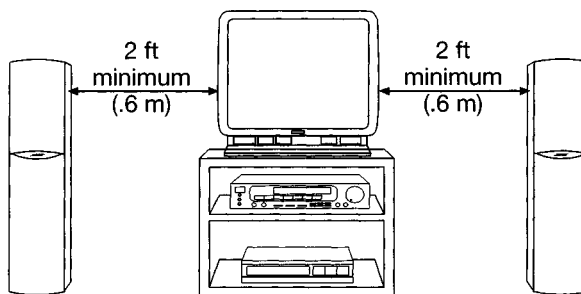

Choosing the speaker cord

It is important to use the proper gauge (thickness) of speaker cord. Standard zip cord (2-conductor, 18-gauge or .82 mm² wire or larger) is recommended for most applications. You can find this wire at most electrical and hardware stores.

If the length of speaker wire extends more than 20 feet (6 m) from a receiver or amplifier, refer to "Wire recommendations" on page 9 or contact your authorized Bose dealer for more information.

Running the speaker cord through a wall or under a floor

Make sure you have enough cord to reach from the receiver to each speaker. For in-wall installation, check your local building code requirements. Before proceeding, you may want to contact an electrical installer for information about your local building or safety regulations.

Preparing the speaker cord

Speaker cord consists of two insulated wires. The insulation around one wire is marked (striped, collared, ribbed, or may have writing on it). This marked wire is always positive (+). The plain wire is always negative (-). These wires correspond to the red (+) and black (-) terminals on the speaker, receiver, or amplifier.

Note: It is sometimes difficult to distinguish wire markings. Inspect both wires carefully.

To prepare the ends of the cord, strip approximately $\frac{3}{8}$ to $\frac{1}{2}$ -inch (10-12 mm) of insulation from both wires. Then, twist the bare ends of each wire so there are no loose strands of wire.

WARNING: Never use broken or frayed wire, as damage or electrical shock may result.


Making the connections

Connect your speaker wire to the SPEAKERS A or MAIN (front) left and right speaker outputs on your amplifier or receiver. See your receiver owner's guide for any additional information or instructions.

CAUTION: Before making any connections, turn off your receiver and unplug it from the AC power mains. Failure to do so may result in damage to your system.

Figure 5

 Wiring schematic

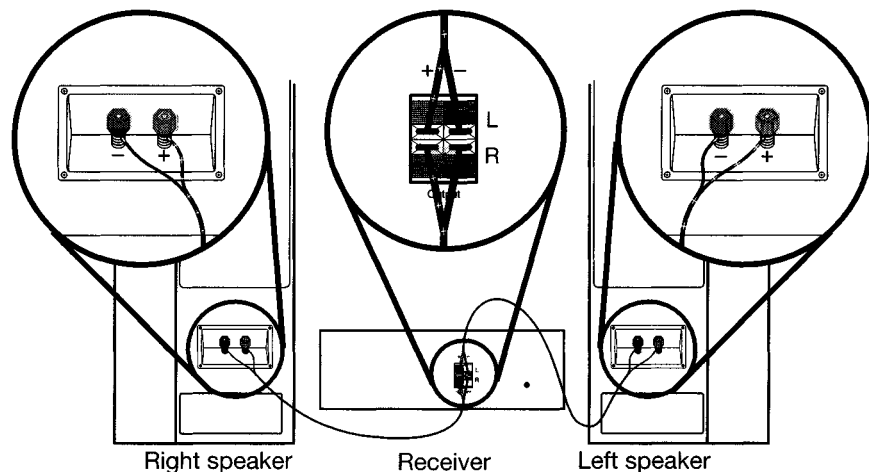

Unscrew the hex knobs on the terminal posts (Figure 5) located on the back of the left (L) speaker. This reveals a small opening through each post where the wire goes.

1. Insert the marked wire into the red (+) terminal. Insert the plain wire into the black (-) terminal.
2. Tighten the knobs to secure the wires.
3. Connect the other ends of the wire to your receiver or amplifier.
 - A. Attach the marked wire at one end to the red (+) terminal.
 - B. Attach the plain wire at that end to the black (-) terminal.
4. Repeat steps 1, 2, and 3 for the right (R) speaker connections.

Note: Now is a good time to record the serial numbers of these speakers on page 3 of this guide and on your warranty card.

Checking the connections

Check all the connections from the receiver to the left and right speakers. Make sure all the wires are connected in phase (+ to + and – to –).

Correct any wiring problems before you plug in your receiver and turn it on.

⚠ CAUTION: 601® speakers incorporate an automatic protection circuit, which guards against most kinds of damage from electrical stress or overload. This circuit activates at high volume levels to reduce output, causing a slight decrease in volume. You may also notice light coming from inside the speaker cabinet. This is normal operation and indicates that power input may be exceeding safe levels. Sustained listening at these levels is not recommended.

For use in home theater

Your speakers are fully compatible with all surround sound formats. They may be used as the front left and right main speakers, or in larger more powerful systems as full-range surround channel speakers.

For rear or surround speakers

For use as the rear or surround speakers, connect your speakers to the “Rear” or “Surround” speaker outputs of the receiver or amplifier. For use with digital home theater systems, we recommend trying both “Large” and “Small” settings to determine the best performance with your receiver or amplifier. See your receiver owner’s guide for any additional information or instructions.

Setting your surround sound receiver or amplifier

After making the connections, you may try any additional surround sound modes that your receiver may have. These modes may have different names depending on the manufacturer, such as, ACTION, MOVIE, THEATER. Select the settings for music, movies or both that sound best in your listening environment. See your receiver/amplifier owner’s guide for additional information on selecting settings.

Troubleshooting

If you are experiencing problems with your 601® speakers:

1. Turn off the amplifier or receiver and check all the connections between the speakers and the amplifier or receiver.
2. Check your amplifier or receiver owner's guide, since other components may be the cause of the problem.
3. Use the chart below as troubleshooting guidelines. If this does not solve the problem, contact your authorized Bose® dealer to arrange for service. Refer to the address list enclosed in the product packaging for correct phone numbers.

Problem	Possible cause	How to find out	Solution
One speaker doesn't play, or sounds distorted.	Amplifier or receiver channel, speaker, or speaker wire may be defective.	Switch the LEFT and RIGHT connections on the back of your speakers.	If the previously "broken" speaker now plays properly, and the other one does not, one channel in the amplifier or receiver, or that speaker wire is probably defective. If the original speaker still does not play properly, call Bose or your retailer to arrange for service.
Both speakers do not play, or sound distorted.	Amplifier or receiver may be defective.	Disconnect the amplifier or receiver from the speakers.	Reconnect the speakers to another amplifier or receiver that works properly.
High sound volume drops suddenly.	The automatic protection circuit has activated to protect the speakers from electrical stress or overload.	Lower the volume. If it returns to normal, your speakers' automatic protection circuit caused the sudden drop. This volume reduction protects the speakers from electronic stress and overload.	Return the volume to a reasonable level; avoid extremely high volume settings.
No bass or diminished sound quality.	Wiring may be out-of-phase.	Check connections. They should be in phase (+ to + and - to -).	Adjust connections, if they are out of phase.

Technical information

Features

- Direct/Reflecting® speaker technology
- Stereo Everywhere® speaker technology
- Proprietary bass reproduction
- Automatic protection circuitry
- Syncom® computer quality control

Speaker driver complement

- Two 6½" (16.5 cm) woofers
- One 2" (5.1 cm) ferrofluid tweeter per cabinet

Compatibility

Compatible with A/V receivers and amplifiers rated from 10 to 200 watts per channel, rated from 4 to 8 ohms.

Power rating: 100 Watts IEC

Finish

- Graphite gray
- Light cherry

Dimensions/Weight

32"H x 8"W x 13¾"D (81 cm x 20 cm x 35 cm)

Each speaker weighs 30 lb (13.6 kg)

Wire recommendations

Based on maximum frequency response deviation of 0.5 dB

Gauge	Length
18 (0.82 mm ²)	20 ft (6 m) maximum
16 (1.3 mm ²)	30 ft (9 m) maximum
14 (2.1 mm ²)	50 ft (15 m) maximum
12 (3.3 mm ²)	80 ft (24 m) maximum

Customer service

 
For additional help in solving problems, contact Bose® customer service. Refer to the address list enclosed in the product packaging for correct phone numbers.

Cleaning

Wipe the 601® speaker cabinets using a dry cloth. Do not use solvents or chemicals. Do not allow liquids to spill on, or objects to drop into the speaker grilles. You may vacuum the grilles carefully; the drivers are directly behind the grille cloth. No other maintenance is required.





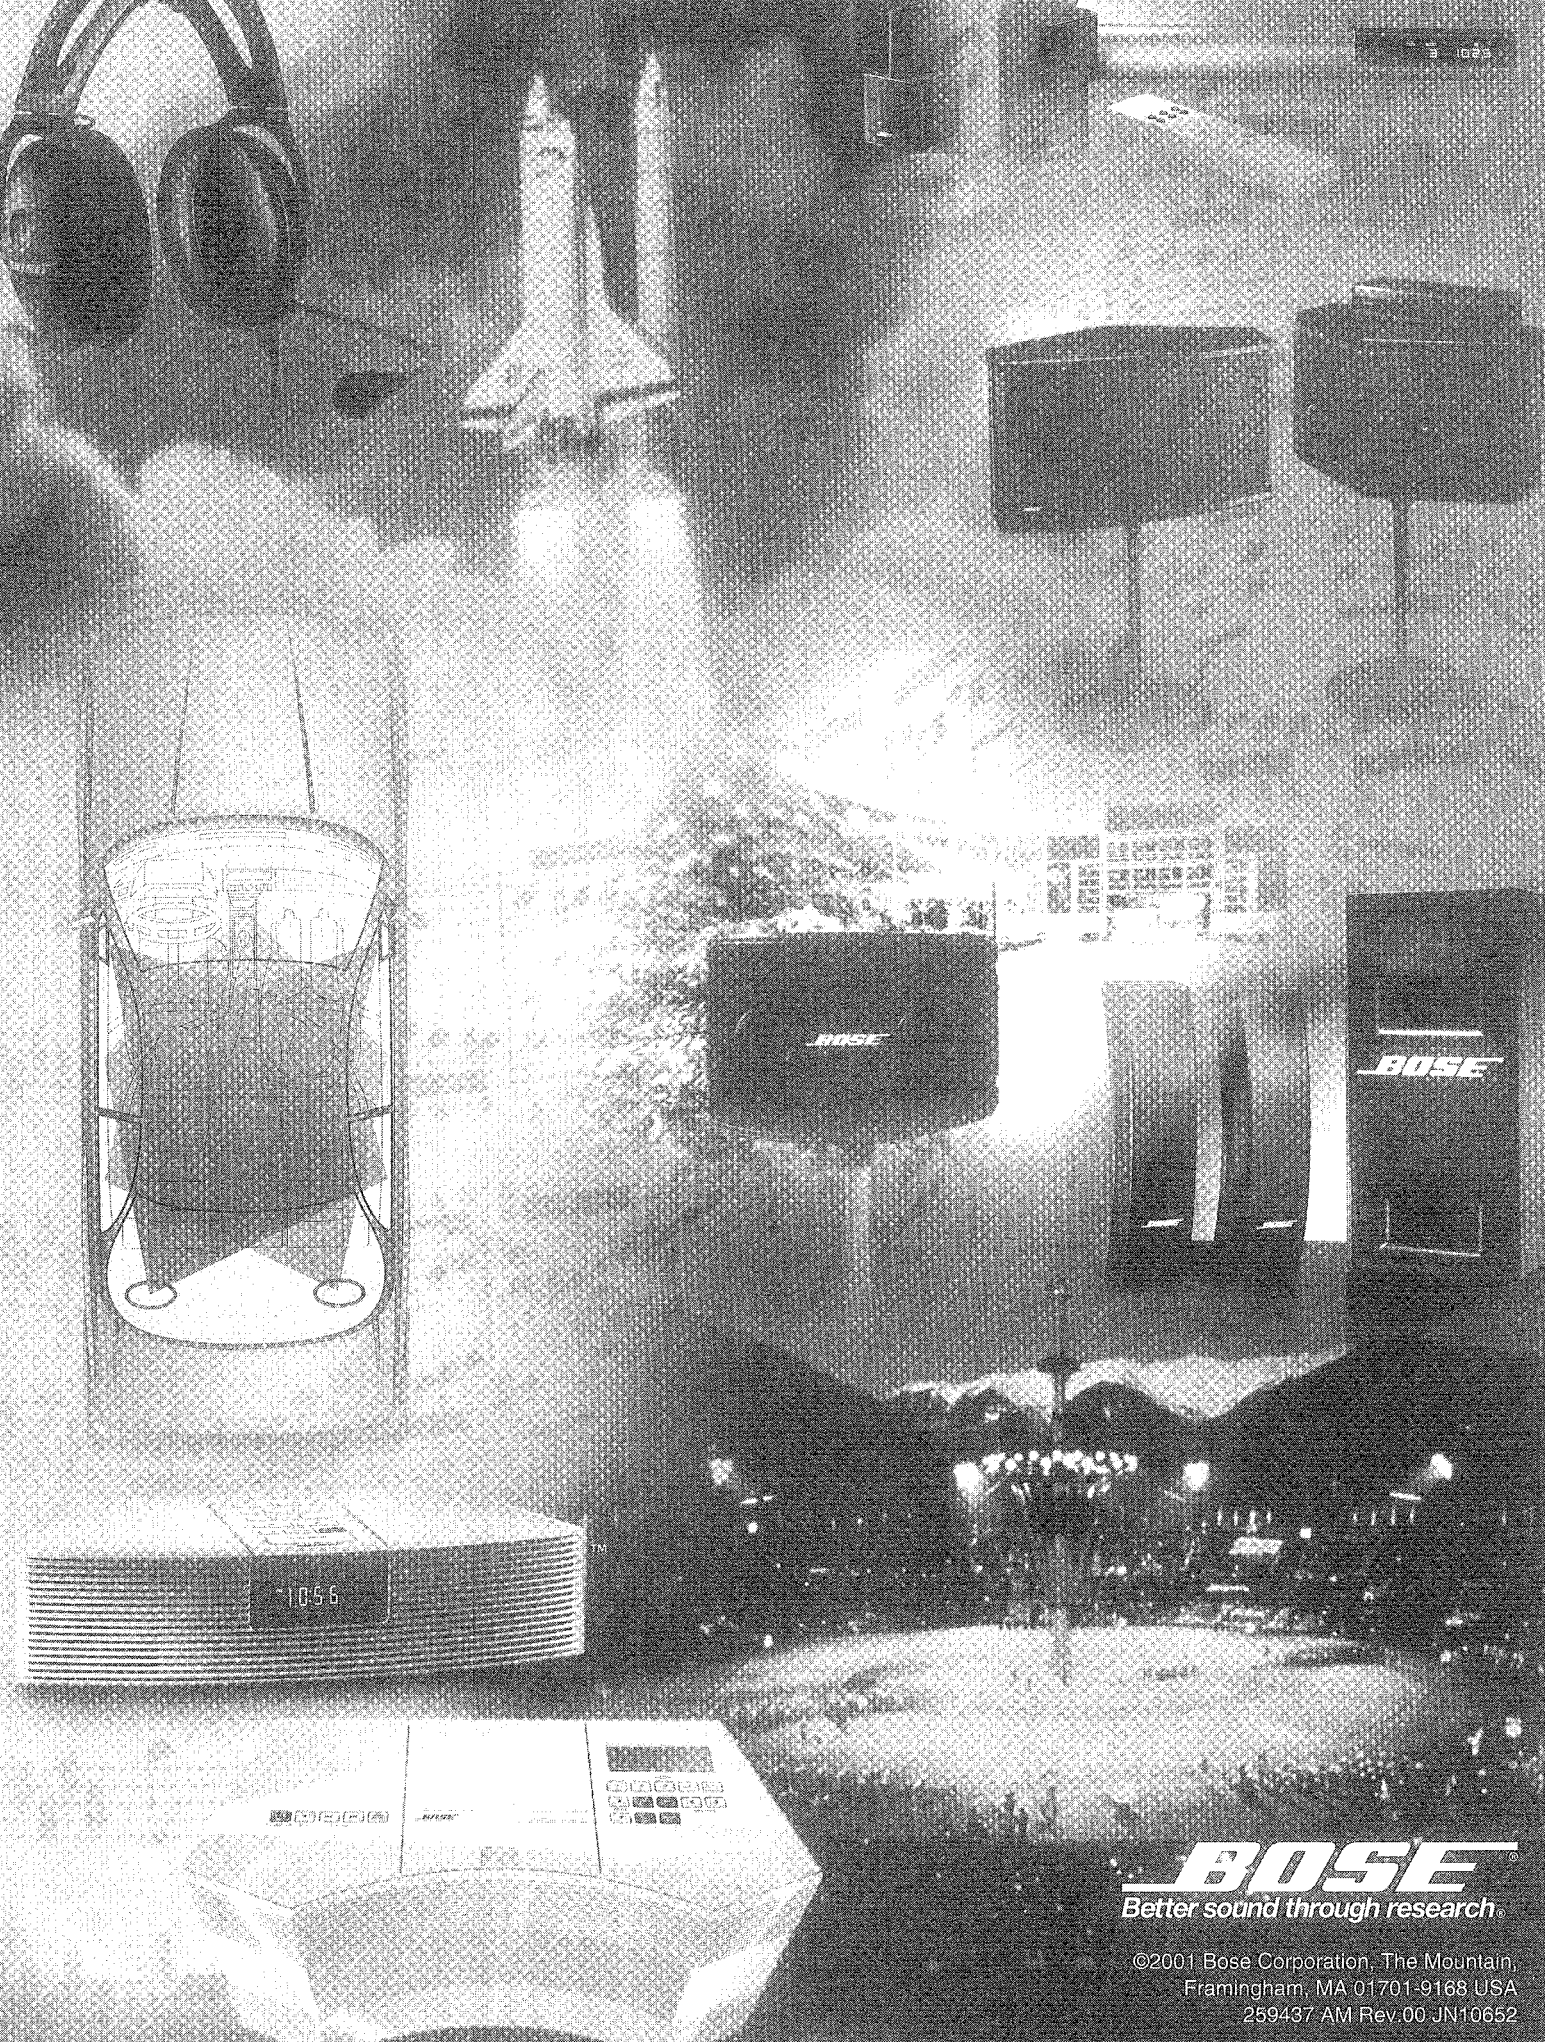

BOSE
Better sound through research.

©2001 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
259437-AM Rev.00 JN10652

OUR COMMITMENT TO YOU

We take great pride in designing each of our products with the goal of providing the highest accuracy musical performance possible in the price range of that product. We strive to reproduce the musical sounds as closely as possible to those of the original performance. And we strive to avoid flashy sounds such as those associated with accentuated bass and/or treble frequencies. While those sounds may be initially attractive to the novice, they are not real and are not enduring. In addition, we use only the highest quality parts and the latest assembly and quality control techniques to ensure the reliability and long life of our products.

Our reputation rests on our steadfast pursuit of this policy in sound systems for the home, the automobile, and businesses.

At Bose® we reinvest 100% of our earnings back into the company. This enables us to support research that continually gives rise to new technologies for improving sound reproduction.

When you purchase any product from Bose, we encourage you to compare it, as we do, to competitive products for musical accuracy. We believe that this process will enhance your appreciation of the product you select.

With best wishes from all of us at Bose for many years of enjoyable listening.

BOSE® PRODUCT REGISTRATION & WARRANTY INFORMATION

NOT For
U.S. & Canada
See Blue Card

Produktregistrering og garantioplysninger ved
internationalt brug

(undtagen nord Amerika)

Warenregistrier- und Garantiekarte für weltweiten Gebrauch

(außer Nordamerika)

Registro del producto e información sobre la garantía
para todos los países

(excepto Norteamérica)

Informations produit & garantie pour utilisation mondiale

(excepté l'Amérique du Nord)

Informazioni sulla registrazione e sulla garanzia del
prodotto per uso mondiale

(tranne che nel Nord America)

Informatie aangaande productregistratie en -garantie voor
wereldwijd gebruik

(uitgezonderd Noord-Amerika)

Produktregistrering och garantiinformation för globalt bruk

(utanför Nordamerika)

BOSE

IMPORTANT! • VIGTIGT! • WICHTIG! • ¡IMPORTANTE! • IMPORTANT! • IMPORTANTE! • BELANGRIJK! • VIKTIGT!

Please complete and return immediately! / Udfyld venligst og returnér øjeblikkeligt! / Bitte sofort ausfüllen und zurückschicken!
¡Completar y remitir inmediatamente! / Veuillez compléter et renvoyer immédiatement! / La preghiamo di completare la scheda
e di rinviarla immediatamente! / Gelieve in te vullen en onmiddellijk terug te zenden! / Fyll i och skicka in omedelbart!

1. First Name _____ **Last Name** _____

Fornavn / Vorname / Nombre
Prénom / Nome / Voornaam / Förnamn

Efternavn / Nachname / Apellido / Nom
Cognome / Familienaam / Efternavn

BOSE®

Street _____

Adresse / Straße / Calle / Rue / Via / Straat / Gatuaadress

Postal Code _____ **City** _____

Postnr. / PLZ / Código Postal / Code postal
CAP / Postcode / Postnummer

By / Ort / Ciudad / Ville / Città / Stad

Country _____

Land / País / Pays / Paese

2. Date Purchased _____

Købsdato / Kaufdatum / Fecha de adquisición / Date d'achat
Data d'acquisto / Datum van aankoop / Inköpsdatum

3. Model Purchased / Hvilken model købte De / Modell / Modelo

Modèle acheté / Modello acquistato / Model gekocht

- | | |
|---|--|
| 01. <input type="checkbox"/> 101® | 15. <input type="checkbox"/> Acoustimass® multimedia |
| 02. <input type="checkbox"/> 141™ | speaker system |
| 03. <input type="checkbox"/> 151™ | 16. <input type="checkbox"/> AM-500™ Acoustimass® |
| 04. <input type="checkbox"/> 201® | Speakers |
| 05. <input type="checkbox"/> 2001™ | 17. <input type="checkbox"/> Freestyle® |
| 06. <input type="checkbox"/> 301® | 18. <input type="checkbox"/> Lifestyle® 3 |
| 07. <input type="checkbox"/> 4001™ | 19. <input type="checkbox"/> Lifestyle® 5 |
| 08. <input type="checkbox"/> 501® | 20. <input type="checkbox"/> Lifestyle® 10 |
| 09. <input type="checkbox"/> 701® | 21. <input type="checkbox"/> Lifestyle® 11 |
| 10. <input type="checkbox"/> 901® | 22. <input type="checkbox"/> Lifestyle® 12 |
| 11. <input type="checkbox"/> Acoustimass®-3 | 23. <input type="checkbox"/> Lifestyle® powered speaker |
| 12. <input type="checkbox"/> Acoustimass®-4 | 24. <input type="checkbox"/> MediaMate™ computer speaker |
| 13. <input type="checkbox"/> Acoustimass®-5 | 25. <input type="checkbox"/> Model 100 |
| 14. <input type="checkbox"/> Acoustimass®-7 | 26. <input type="checkbox"/> V-100™ video speaker |

27. Other Products / Andre produkter / Andere Produkte

Otros artículos / Autres produits / Altri prodotti
Andere produkten / Andra produkter

_____; _____
_____; _____
_____; _____

4. Did you purchase any accessories with this product? (check all that apply)

Avez-vous acheté un/des
accessoire(s) avec ce produit ?
(cocher les cases concernées)

Købte De ekstraudstyr sammen
med dette produkt? (Afmærk
alle passende rubrikker)

Ha acquistato altri accessori
insieme a questo prodotto?
(selezioni tutte le voci pertinenti)

Haben Sie auch Zubehör
gekauft? (Zutreffendes bitte
ankreuzen)

Heeft u toebehoren aange-
kocht met dit produkt?
(aanduiden wat past)

Ha adquirido algún accesorio
con este producto (marque
todos los que correspondan)

Köpte du några tillbehör
tillsammans med denna
produkt? (kryssa för samtliga
du köpte)

01. ☐ **Table stand**

Bordstativ / Ständer / Pie para mesa / Table
Stativo da tavolo / Tafelstatief / Bordstativ

☐ **from Bose?**

fra Bose? / von Bose? / ¿de Bose? / de Bose ?
della Bose? / van Bose? / från Bose?

02. ☐ **Floor stand**

Gulvstativ / Bodenständer / Pie para suelo / Support
Stativo da pavimento / Vloerstatief / Golvstativ

☐ **from Bose?**

fra Bose? / von Bose? / ¿de Bose? / de Bose ?
della Bose? / van Bose? / från Bose?

U.S. & Canadian Residents Please Use Blue Registration Card

03. ☐ **Wall/ceiling bracket**

Væg/loftsstøtte / Hanging-Kit / Abrazadera de pared/
cielorraso / Support pour mur/plafond / Staffa da parete/
soffitto / Muur-/plafondklamp / Vägg-/takfäste

☐ **from Bose?**

fra Bose? / von Bose? / de Bose? / de Bose?
della Bose? / van Bose? / från Bose?

04. ☐ **Other accessory**

Andet ekstraudstyr / Anderes Zubehör / Otros accesorios
Autre accessoire / Altro accessorio / Andere toebehoren
Annat tillbehör

5. Please indicate the Product Serial Number(s).

Angiv venligst produktets serienummer.

Geben Sie bitte die Seriennummer(n) des Produktes an.

Por favor indique el número de serie de cada artículo.

Veuillez indiquer le(s) numéro(s) de série de chaque produit.

La preghiamo di indicare il numero di serie di ciascun prodotto.

Gelieve het serienummer of -nummers aan te duiden.

Ange produktens serienummer.

**You can find the number(s)
on the Product ID label.
Or consult your Owner's
Manual for the Serial
Number location.**

Vous pouvez trouver le(s)
numéro(s) sur l'étiquette
d'identification du produit,
ou en consultant votre Notice
d'utilisation sur l'emplacement.

Serienumre findes på produktets
ID mærkat. Eller slå op i Bruger-
vejledningen for oplysninger om
serienummerets placering.

Per individuare i numeri di serie
consulti la scheda di identificazione
o il Manuale di istruzioni forniti
con il prodotto.

Sie finden die Nummern auf dem
Geräteschild, oder lesen Sie in
der Bedienungsanleitung nach,
wo sie sich befinden.

De serienummers bevinden zich
op het produkt gekleefde ID etiket
of sla uw Gebruiksaanwijzing na
voor de locatie ervan.

Se pueden encontrar los
números de serie en la etiqueta
de identificación del producto
o consultando en la Guía
del usuario.

Serienumren hittar du normalt på
ID-etiketten på produkten. I annat
fall framgår av Bruksanvisningen
var serienumret återfinns.

Continues on back
Fortsætter bagpå
Fortsetzung auf der Rückseite
Sigue al dorso

Suite au verso
Continua sul retro
Zie vervolop de achterkant
Fortsätter på baksidan

Please Keep This Warranty Information Card

Limited Warranty Bose® Product

What is covered:

All parts defective in material or workmanship.

For how long:

At least one year from the purchase date, or longer if specified in
your owner's guide or manual, but not longer than five years from the
purchase date.

What we will do:

We will, at our sole option, repair or replace any defective parts free
of charge.

What we will not do:

Pay shipping or transportation charges from you to us.

What you must do:

1. Return product personally with proof of purchase from an authorized
Bose dealer to your authorized Bose dealer, or
2. Return product personally with proof of purchase from an authorized
Bose dealer to the nearest Bose Service Agency, or
3. Return product personally with proof of purchase from an authorized
Bose dealer directly to the Bose organization in your country. If you
elect to return the product directly to a Bose organization,
 - a) Contact the Bose organization in your country for specific return
and shipping instructions;
 - b) Properly pack the product in the original carton for shipping.
If you need a new carton, contact the Bose organization in your
country for a new carton available at a nominal charge;
 - c) Label and ship, freight prepaid, to the address provided by the
Bose organization in your country, and
 - d) **Place any necessary return authorization number** prominently
on the outside of the carton. (Cartons not bearing a return
authorization number, where required, will be refused.)

Other conditions:

This warranty is fully transferable provided the current owner furnishes
the original proof of purchase from an authorized Bose dealer. THE PRO-
VISIONS OF THIS WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY,
WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY
WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR
PURPOSE. BOSE'S MAXIMUM LIABILITY SHALL NOT EXCEED THE
ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO
EVENT SHALL BOSE BE LIABLE FOR SPECIAL, INCIDENTAL, CON-
SEQUENTIAL, OR INDIRECT DAMAGES. This warranty does not cover a
defect that has resulted from improper or unreasonable use or maintenance,
accident, improper packing, or unauthorized tampering, alteration, or
modification as determined solely by us. This warranty is void if the label
bearing the serial number has been removed or defaced.

Other Law Rights:

This warranty gives you specific legal rights, and you may also have other
rights which vary from state to state or country to country. Some places
do not allow limitations on implied warranties or the exclusion or limitation
of incidental or consequential damages, so the above limitations or
exclusions may not apply to you.

BOSE

NOT For U.S. & Canada

6. City and store where purchased / By og forretning, hvor De købte produktet / Wo kauften Sie das Produkt? (Stadt und Geschäft) / Ciudad y tienda donde fue adquirido / Ville et magasin où l'achat a été fait / Città e negozio d'acquisto / Stad en winkel van aankoop / Butik och ort för inköpet

7. Please indicate your gender and age / Angiv venligst Deres køn og alder / In welche Gruppe fallen Sie? / Por favor indique su sexo y edad / Veuillez indiquer votre sexe et votre âge / La preghiamo di indicare sesso ed età / Gelieve geslacht en ouderdom aan te duiden / Ange ditt kön och din ålder

☐ **male** / Mand / Mann
Varón / Masculin
Maschile / Man

☐ **female** / Kvinde / Frau / Mujer
Féminin / Femminile / Vrouw
Kvinna

☐ 0-18
☐ 35-50

☐ 19-25
☐ 51-65

☐ 26-34
☐ 66+

8. Do you have any comments about Bose® or its products you would like to share?

Har De kommentarer om Bose eller Boses produkter?

Was halten Sie von Bose oder Bose Produkten?

Por favor indique cualquier comentario sobre Bose o sus productos que considere pertinente.

Commentaires sur Bose ou ses produits?

Commenti che desidera condividere relativi alla Bose ed ai suoi prodotti.

Heeft u enige opmerkingen te maken aangaande Bose of Bose produkten?

Har du några kommentarer med avseende på Bose eller företags produkter?

Australia

Bose Australia, Inc.
11 Muriel Avenue Rydalmere
N.S.W. 2116

Belgique/België

Bose N.V., Essenestraat 16
1740 Ternat

Danmark

Bose A/S, Industrivej 7
2605 Brøndby

Deutschland

Bose GmbH, Max-Planck-Straße 36
Postfach 1125
61381 Friedrichsdorf

France

Bose, 6, rue Saint Vincent
78100 Saint Germain en Laye

Ireland

Bose Corporation
Carrickmacross, Co Monaghan

Italia

Bose S.p.A., Via Luigi Capucci 12
00147 Roma

Japan

Bose K.K., Shibuya YT Building
28-3 Maruyamacho, Shibuya-ku
Tokyo

Nederland

Bose B.V., Nijverheidstraat 8
1135 GE Edam

Norge

Bose Norge, Solheimsgt. 11
N-2001, Lillestrøm

Schweiz

Bose A.G., Rünenbergerstrasse 13A
4460 Gelterkinden

Sverige

Bose A/S, Blandsädsgratan 2D
43146 Mölndal

United Kingdom

Bose U.K. Ltd., Trinity Trading Estate
Sittingbourne, Kent ME10 2PD

Other locations

Bose Products B.V.
Nijverheidstraat 8
1135 GE Edam, Nederland

Bose Corporation, The Mountain
Framingham, MA 01701-9168 USA

Fill in the blanks at the right
with the address for your
country listed above.

Afmærk de tomme felter til højre,
med adressen for Deres land
listet ovenfor.

Tragen Sie rechts die oben
angegebene Adresse für Ihr
Land ein.

Llene el espacio en blanco
con la dirección para su país
que aparece en la lista.

Remplissez les blancs à droite
avec l'adresse pour votre pays
figurant sur la listeci-dessus.

Complete the porzione
di destra con l'indirizzo
corrispondente al paese
di residenza dall'elenco.

De lege spaties rechts invullen
met het adres voor uw boven
aangeduid land.

Fyll i adressen för ditt land,
enligt förteckningen ovan,
i utrymmet till höger.